


HFT Fuse:

The HFT fuse (1) is located under the rear seat.

The specified fuse is:

10 A

1. Remove the rear seat (page 71).
2. Open the fuse box cover (2).
3. Pull out the old fuse and install a new fuse.
The spare fuse is located in the fuse box (page 146).
4. Close the fuse box cover.
5. Install the rear seat.

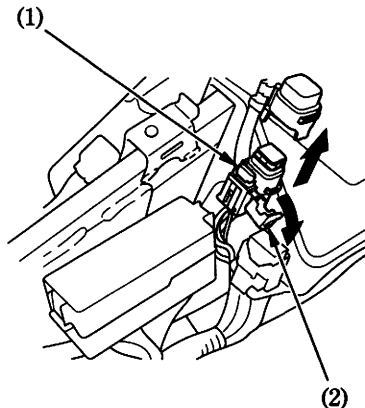

- (1) HFT fuse
(2) Fuse box cover