


Low Beam Headlight Bulb

The right and left low beam headlight bulb replacement can be done in the same way.

1. Disconnect the connector (1) by pressing tab (2).
2. Turn the bulb (3) counterclockwise, and remove it.
3. Install a new bulb in the reverse order of removal.

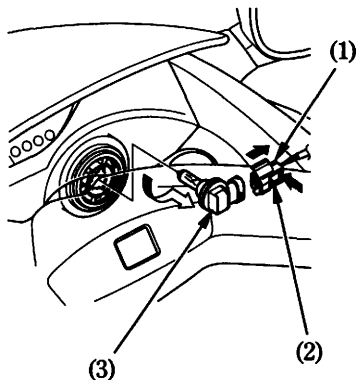

- (1) Connector
(2) Tab
(3) Bulb