

STARTING THE ENGINE

Always follow the proper starting procedure described below.


This scooter is equipped with a side stand ignition cut-off system. The engine cannot be started if the side stand is down. A running engine will shut off if the side stand is lowered.

This scooter has an automatic fuel cock and starting enrichment thermal valve; there is no manual operation.

1. Place the scooter on its center stand.
2. Make sure that the engine stop switch is at ○ (RUN).
3. Turn the ignition switch (1) to ON.

▲WARNING

- * **Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that can cause loss of consciousness and lead to death.**

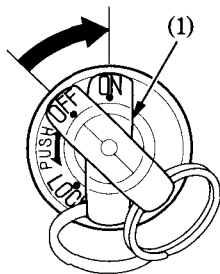

(1) Ignition switch