

### Installation Note:

- Install the axle aligning the spline with the wheel hub.
- Coat the grease to the axle threads.
- Clean the wheel hub and wheel mating surface.
- Install the rear wheel and align the index marks (11) of wheel hub with the wheel.
- Install the new cotter pin and cap securely.
- Tighten and torque the axle nuts to the specification.

Axle nut torque:

118 N·m (12.0 kgf·m , 87 lbf·ft)


After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

### **▲WARNING**

**\* If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

### **CAUTION:**

**\* Always replace used cotter pins with new ones.**

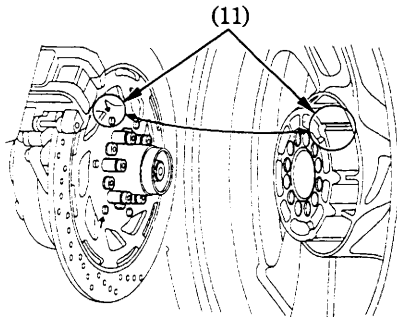

(11) Index marks