

4. Install the filter with the rubber seal facing out, away from the engine. You will see “OUT-SIDE (TOWARDS FILTER COVER)” mark on the filter body, near the seal.

CAUTION:

* **Improper installation of the oil filter can cause serious engine damage.**

5. Reinstall the oil filter cover (2), making sure the bolts are tightened securely.

Oil Filter Bolt Torque:

12 N·m (1.2 kg·m, 9 lb·ft)

6. Perform steps 6 – 9 of Engine Oil Change.

Engine oil after draining and oil filter change:

1.95 ℓ (2.06 US qt, 1.72 Imp qt)


CRANKCASE BREATHER

(Refer to the maintenance precautions on page 45).

1. Remove the drain plug (1) from the tube and drain deposits into a suitable container.
2. Reinstall the drain plug.

NOTE:

* Service more frequently when riding in rain, at full throttle, or after the motorcycle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.

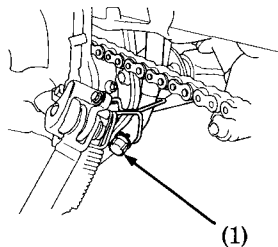

(1) Drain plug