
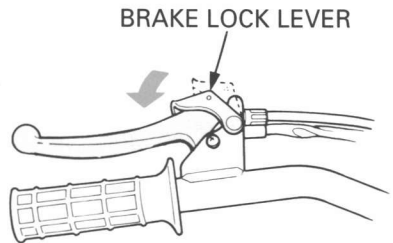


• BRAKE LOCK LEVER

The control is used when starting the engine and locks the rear brake lever in its applied position.

To apply lock lever:

- (1) Pull the rear brake lever in fully.
- (2) Slide the lock lever over the rear brake lever; release the rear brake lever.

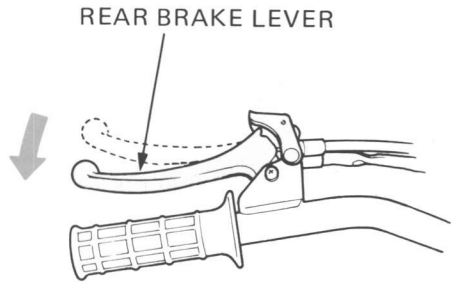

NOTE:

The rear brake will not be locked if the rear brake is not adjusted properly.

To release lock lever:

- (1) Squeezing the rear brake lever further in will release the lock lever automatically.
- (2) Release the hand from the rear brake lever.

