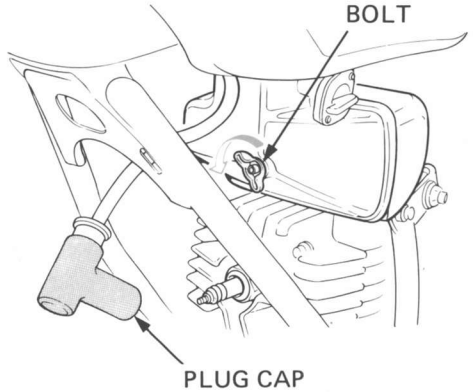

- AIR CLEANER MAINTENANCE

The air cleaner accumulates dust and must be inspected periodically. Dirt which accumulates at the air cleaner will restrict the flow of air, resulting in loss of power. To service the air cleaner, proceed as follows:

- (1) Remove the plug cap.
- (2) Remove the bolt and air cleaner.
- (3) Wash the air cleaner in clean stoddard solvent and allow to dry thoroughly.
- (4) Soak the air cleaner in clean motor oil (SAE10W-30) or clean gear oil (#80-90) until saturated, then squeeze out excess oil.



⚠ WARNING

* *Petrol or low flash point solvents are highly flammable and must not be used to clean the air cleaner.*

NOTE:

If the air cleaner is not installed on the element holder properly, dirt and dust may enter, resulting in rapid wear of the piston rings and cylinder.

