


## Tread Wear

Inspect the wear indicator (1) to check for insufficient tread depth. If the wear indicator is visible, the tyre should be replaced.

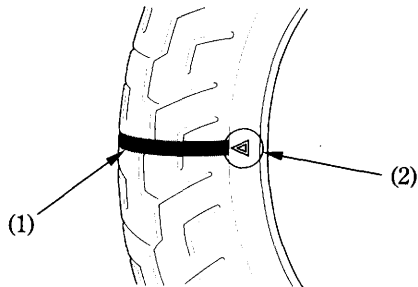

- (1) Wear indicator
- (2) Wear indicator location mark