


## FRONT UPPER COVER

### Removal:

1. Remove the screws A (1) and the screws B (2).
2. Remove the front upper cover (3), then disconnect the connector (4).

### Installation:

- Installation can be done in the reverse order of removal.

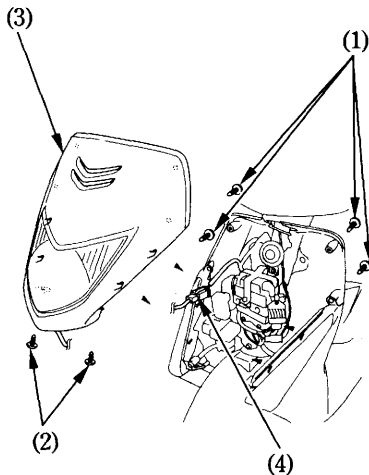

- (1) Screws A
- (2) Screws B.
- (3) Front upper cover
- (4) Connector