


Battery Removal

1. Remove the front upper cover (page 39).
2. Remove the battery holder (1) by removing the bolt (2).
3. Disconnect the negative (-) terminal lead (3) from the battery first, then disconnect the positive (+) terminal lead (4).
4. Remove the battery.

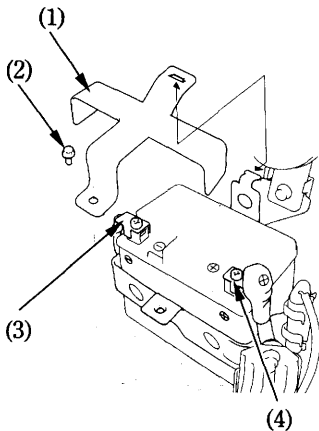

- (1) Battery holder
- (2) Bolt
- (3) Negative (-) terminal lead
- (4) Positive (+) terminal lead