
Digital clock

Shows hour and minute. To adjust time, proceed as follows:

1. Turn the main switch ON.
2. Press the RST button (Reset button). The minute display will read "00".
3. Press the "H" button (Hour button). To advance time, keep the button down until the desired hour is displayed.
4. Press the "M" button (Minute button). To advance, hold the button down. The display will be returned to "00" when "60" minutes are reached without affecting the hour display.

