


MAINTENANCE

- Position light Maintenance Cover
Remove the screws, then slide the cover to the rear.

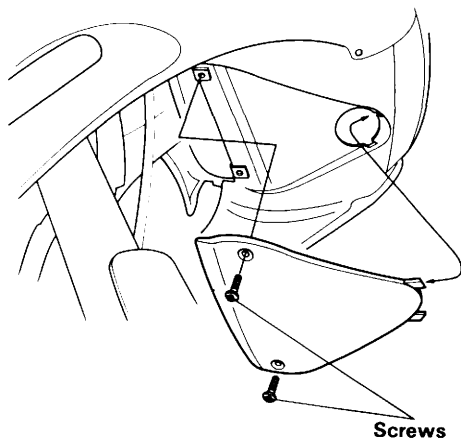

- Taillight Maintenance Cover
Push the triangular flaps of the document compartment in and backward against the sides of the document compartment ①. Pull up on the rear of the document compartment toward the front ②.

