

FILTERS/LUBRICATION

Refer to Maintenance Precautions on page 64.

The air cleaner should be serviced at regular intervals (page 60). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the parts in sequence, according to the order in the illustration.

NOTE:

- Be careful not to break any tabs.
2. Remove the air cleaner element and discard it.
 3. Install a new air cleaner element. Use the Honda air filter or an equivalent filter specified for your model. Other filters not specified for your model may not filter impurities properly.
 4. Install removed parts in the reverse order of removal.

NOTE:

- Make sure to engage all tabs and to secure all fasteners.