

# ELECTRICAL

---

## FUSE REPLACEMENT

Refer to Maintenance Precautions on page 64.

The main fuse, located on the starter magnetic switch under the left side cover is 30 A.

The spare main fuse is under the starter magnetic switch.

The fuse box is located under the left side cover.

The specified fuses are 10 A and 20 A.

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

### CAUTION:

- **Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse, remove the left side cover (page 66). Disconnect the wire connector of the starter magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.

