

---

### Current Fuel Consumption

Indicates the momentary fuel consumption of each 15 seconds during engine operation. With motorcycle speed 5 km/h or below “- -” is displayed.

The indicated fuel consumption may differ from the actual fuel consumption.

The E type uses mile/ℓ or km/ℓ, the ED, F and U type in km/ℓ or ℓ/100 km.

When “- -” blinks, go to your Honda dealer.

Current fuel consumption



### Average Fuel Consumption

The average fuel consumption after reset until that moment is indicated every 15 seconds.

The indicated fuel consumption may differ from the actual fuel consumption.

The E type uses mile/ℓ or km/ℓ, the ED, F and U type in km/ℓ or ℓ/100 km.


When “- -” blinks, go to your Honda dealer.

Average fuel consumption



### To reset average fuel consumption:

Press and hold the FCD/H button for more than 2 seconds with the display in the average fuel consumption.

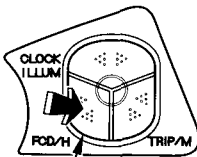

FCD/H button

