

# FEATURES


## (Not required for operation)

---


7. Remove the tank open rod from under the seat.
8. Raise the front of the fuel tank and place the tank open rod between the front of the fuel tank and steering stem.

Do not raise the fuel tank higher than the stopper cable allows.

9. Tighten the nut while holding the pivot bolt at the other end with a wrench.

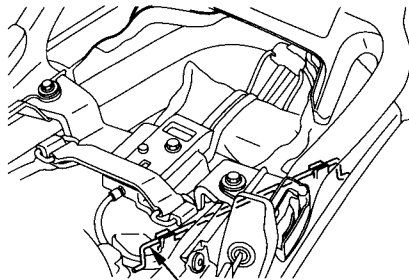

Tank open rod

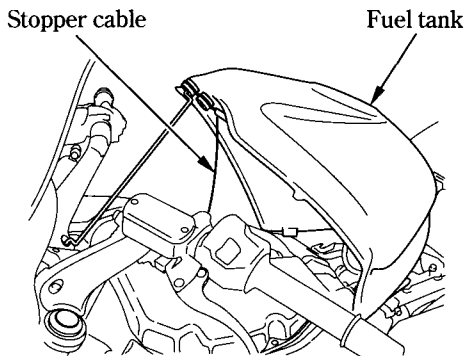

Stopper cable

Fuel tank