

ITEMS	FREQUENCY	WHICHEVER → COMES	ODOMETER READING [NOTE (1)]									Refer to page
			FIRST	× 1,000 km	1	6	12	18	24	30	36	
			↓ NOTE	× 1,000 mi	0.6	4	8	12	16	20	24	
		MONTH		6	12	18	24	30	36			
* FUEL LINE					I		I		I		—	
* THROTTLE OPERATION					I		I		I		99	
AIR CLEANER	2					R			R		91	
SPARK PLUGS					I		R		I		97	
* VALVE CLEARANCE								I			—	
ENGINE OIL				R		R		R		R	92	
ENGINE OIL FILTER				R		R		R		R	94	
* ENGINE IDLE SPEED				I	I	I	I	I	I	I	100	
RADIATOR COOLANT	3					I		I		R	101	
* COOLING SYSTEM						I		I		I	—	
* SECONDARY AIR SUPPLY SYSTEM						I		I		I	—	
FINAL DRIVE OIL						I		I		R	102	
BRAKE FLUID	3				I	I	R	I	I	R	30, 32	
BRAKE PADS WEAR					I	I	I	I	I	I	112	
BRAKE SYSTEM				I		I		I		I	113	
* BRAKELIGHT SWITCH						I		I		I	—	
* HEADLIGHT AIM						I		I		I	—	
CLUTCH SYSTEM						I		I		I	—	
CLUTCH FLUID	3				I	I	R	I	I	R	33	
SIDE STAND						I		I		I	104	
* SUSPENSION						I		I		I	103	
* NUTS, BOLTS, FASTENERS				I		I		I		I	—	
** WHEELS/TYRES						I		I		I	—	
** STEERING HEAD BEARINGS				I		I		I		I	—	