

# MAINTENANCE

---

## FINAL DRIVE OIL

Refer to the Safety Precautions on page 81 .

Change the oil as specified in the maintenance schedule.

Change the oil with the final drive at normal operating temperature and the motorcycle upright on firm, level ground to assure complete and rapid draining.

1. Place the motorcycle on its center stand on a firm, level surface.
2. To drain the oil, remove the oil filler cap, drain plug and sealing washer.
3. After the oil has completely drained, check that the sealing washer on the drain plug is in good condition. If necessary, replace the sealing washer.

Install the drain plug.

Drain plug torque:

20 N·m (2.0 kgf·m , 15 lbf·ft)

4. Fill the final drive with the recommended oil; approximately:

155 cm<sup>3</sup> (5.2 US oz , 5.5 Imp oz)

Make sure the final drive oil level is slightly lower than the lower edge of the oil filler hole.

5. Install the oil filler cap.

### Recommended Oil:

**HYPOID GEAR OIL SAE 80**

