

## SERIAL NUMBER LOCATION

The frame serial number ① is stamped on the left side at the frame center and the engine serial number ② is located on the crankcase directly above the step bar attaching point.

Further, the frame serial number must be indicated when processing the warranty claim and for ordering spare parts.

- ① Frame serial number
- ② Engine serial number

