


**Main Switch (U. K. Type):** The main switch ① is located on the left side of the main pipe.

Functions of the respective switch positions are shown in the chart below.

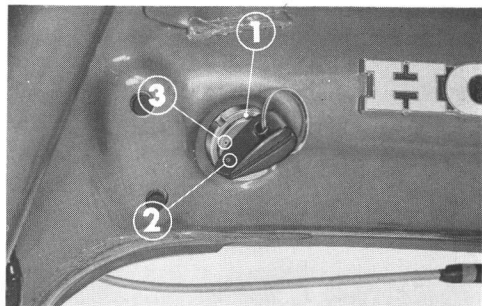

① Main switch

Key Position	Function	Key removal
② black dot	Electrical circuit is opened, engine will not start.	Key can be removed.
③ red dot	Electrical circuit is closed, engine can be started.	key can not be removed.