


MAINTENANCE OPERATIONS

Engine Oil: As the effectiveness of engine oil is limited to a certain period, it is necessary to perform oil changes at suggested intervals shown in the MAINTENANCE SCHEDULE. When draining the oil, it should be performed while the engine is still warm as this will assure complete and rapid draining, saving much time.

1. Remove the oil filler cap from the right crankcase cover.
2. Place an empty vessel under the crankcase to catch the oil and then remove the drain plug ① with 17 mm wrench.
3. After the oil stops draining from the crankcase, operate the kick starter pedal several times to drain any oil which may be left in the engine.
4. When the oil has been completely

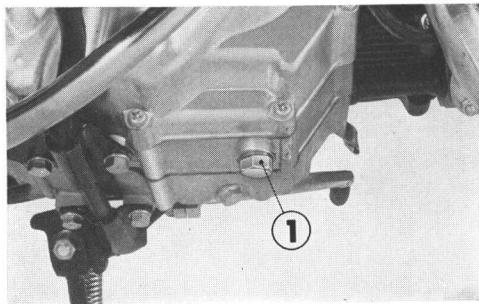

① Oil drain plug