


Clutch : This motorcycle incorporates an automatic centrifugal clutch. Perform the clutch adjustment by the following procedure.

1. Clutch must be adjusted with the engine shut off. Loosen the adjuster lock nut ①.
2. Turn the adjuster screw ② clockwise about one turn; do not turn excessively.

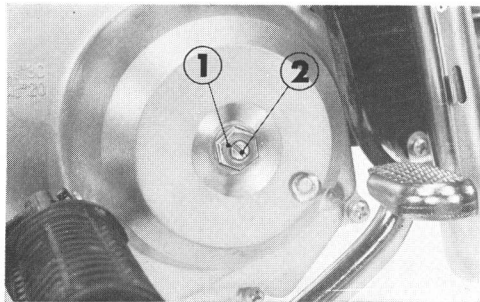

① Lock nut ② Clutch adjuster screw

3. Next, slowly turn the adjuster screw counterclockwise and stop when the screw starts to turn heavy.
4. From this point, back off the adjuster in the clockwise direction 1/8 to 1/4 turn, and then tighten the lock nut.
5. Check to make sure that the clutch operates properly after adjustment.
 - 1) The engine should start easily with the kick starter without the clutch slipping.
 - 2) When changing gear, the clutch operation should be smooth and light, especially when shifting down in gear to the neutral position.

Ignition Timing : Adjustment of contact breaker point gap and ignition timing are required to maintain satisfactory engine performance.

1. Remove the left crankcase cover.