


squeeze out excess oil.

5. Reinstall the air cleaner cover.
- 

**Front Wheel:** Removal of front wheel is performed in the following manner.

1. Place a suitable block under the engine to raise the front wheel off the ground.

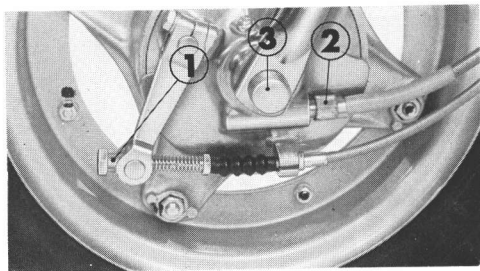

- ① Front brake adjusting nut
- ② Speedometer cable
- ③ Front wheel axle

2. Remove the cotter pin and front brake adjusting nut ① and remove the front brake cable from the brake arm.
  3. Remove the speedometer cable ②.
  4. Remove the front wheel axle nut and pull out the front wheel axle ③.
  5. The front wheel can be removed from the frame.
  6. Installation of front wheel is performed in the reverse order of described above.
- 

**Rear wheel:** Removal of rear wheel is performed in the following manner.

1. Place the motorcycle on its center stand under the engine to raise the rear wheel off the ground.
2. Unscrew the drive chain adjusting nut, remove the cotter pin and rear wheel