



Headlight Bulb (U. K. type)

1. Loosen the mounting screw ① at the bottom of the headlight and remove the headlight rim.
2. Pull the headlight socket ② from the reflector.
3. Press the bulb ③ inward and twist toward the left to disengage the socket pin and then remove the bulb.

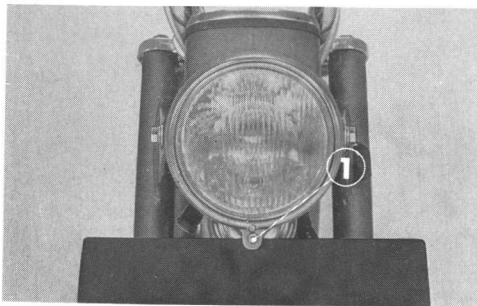

① Headlight mounting screw

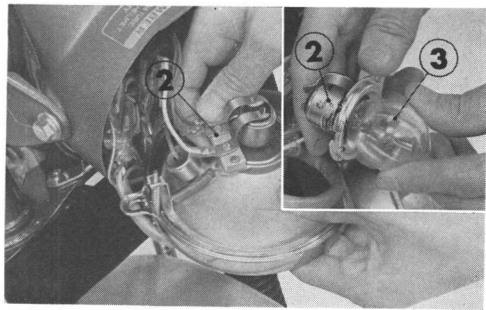

② Headlight socket ③ Headlight bulb