

# Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST ↔ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
				mi	100	600	1200	
				km	150	1000	2000	
				HOURS	20	100	200	
NON EMISSION RELATED ITEMS		REAR FINAL GEAR CASE OIL				(R:EVERY 2 YEARS)		96
	*	BRAKE FLUID	NOTE 3					115
	*	BRAKE SHOE WEAR	NOTE 1					123
	*	BRAKE PAD WEAR	NOTE 1,2					118
		BRAKE SYSTEM						115
	*	REVERSE LOCK SYSTEM						107
		SKID PLATES, ENGINE GUARD						132
	*	CLUTCH SYSTEM						106
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	113
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						—
	**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—	

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 182).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.