

Starting & Stopping the Engine


Starting Procedure

To restart a warm engine, follow the procedure for ‘*High Air Temperature.*’

The starter motor will operate only when the transmission is in neutral.

Normal Air Temperature 10° – 35°C (50° – 95°F)

CENTRE OF HANDLEBAR

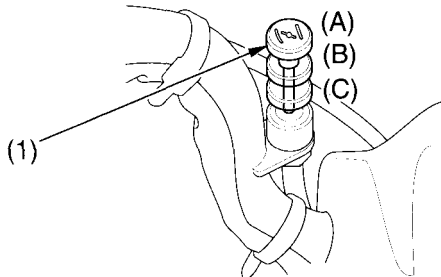

(1) choke knob

(A) fully ON

(B) half way position

(C) fully OFF

1. Pull the choke knob (1) up all the way to fully ON (A) position, if the engine is cold.
 2. With the throttle slightly open, press the start button.
- Pressing the electric start button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the starter button for approximately 10 seconds before pressing it again.

(cont'd)