



# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇒	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
	REAR FINAL GEAR CASE OIL				(R.EVERY 2 YEARS)	1	96
*	BRAKE FLUID	NOTE 3				1	118
*	BRAKE SHOE WEAR	NOTE 1				1	124
*	BRAKE PAD WEAR	NOTE 1,2				1	121
*	BRAKELIGHT SWITCH			1	1	1	127
	BRAKE SYSTEM			1	1	1	118
*	REVERSE LOCK SYSTEM			1	1	1	110
	SKID PLATE, ENGINE GUARD				1	1	135
*	CLUTCH SYSTEM			1	1	1	106
*	SUSPENSION				1	1	—
*	SPARK ARRESTER				C	C	116
*	NUTS, BOLTS, FASTENERS			1		1	—
**	WHEELS/TIRES			1	1	1	—
**	TIE-ROD AND JOINT BOOTS			1	1	1	—
**	STEERING SHAFT HOLDER BEARING					1	—
**	STEERING SYSTEM					1	—

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 188 ).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.