

	FREQUENCY	ITEMS	Whichever comes first ⇒	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	600	1200		
				km	1000	2000		
NOTE	HOURS	20	100	200				
		REAR FINAL GEAR CASE OIL			(R: EVERY 2YEARS)		105	
NON EMISSION RELATED ITEM	*	BRAKE FLUID	(NOTE3)				118 – 119	
	*	BRAKE SHOE WEAR	(NOTE1)				115,120	
		BRAKE SYSTEM					115 – 124	
	*	REVERSE LOCK SYSTEM					109	
		SKID PLATES, ENGINE GUARD					131	
	*	CLUTCH SYSTEM					108	
	*	SUSPENSION					–	
	*	SPARK ARRESTER				C	C	132
	*	NUTS, BOLTS, FASTENERS						–
	**	WHEELS/TIRES						125 – 129
	**	STEERING SHAFT HOLDER BEARINGS						–
	**	STEERING SYSTEM						–

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.