

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
		↔	mi	100	600	1200		
			km	150	1000	2000		
		NOTE	HOURS	20	100	200		
NON EMISSION RELATED ITEMS							151	
		DRIVE SHAFT BOOTS						151
		REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R.EVERY 2 YEARS)		110 – 113
	*	BRAKE FLUID	NOTE 3					130
	*	BRAKE SHOE WEAR	NOTE 1					141
		BRAKE SYSTEM						130
	*	REVERSE LOCK SYSTEM						123
		SKID PLATES, ENGINE GUARD						150
	*	CLUTCH SYSTEM						122
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	129
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						—
	**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—	

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 204).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.