

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
		FIRST ⇒	km	150	1000	2000		
			mi	100	600	1200		
		NOTE	HOURS	20	100	200		
REAR FINAL GEAR CASE OIL					(R: EVERY 2 YEARS)	I	111	
* BRAKE FLUID		NOTE 3				I	130	
* BRAKE SHOE WEAR		NOTE 1					141	
BRAKE SYSTEM				I	I	I	130	
* REVERSE LOCK SYSTEM				I	I	I	122	
SKID PLATES, ENGINE GUARD						I	149	
* CLUTCH SYSTEM				I	I	I	121	
* SUSPENSION						I	—	
* SPARK ARRESTER						C	C	129
* NUTS, BOLTS, FASTENERS				I		I	—	
** WHEELS/TYRES				I	I	I	—	
** STEERING SHAFT HOLDER BEARINGS						I	—	
** STEERING SYSTEM						I	—	

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.