


# Battery (TRX450ER only)

---

The battery is located in a compartment under the left rear fender.

LEFT SIDE

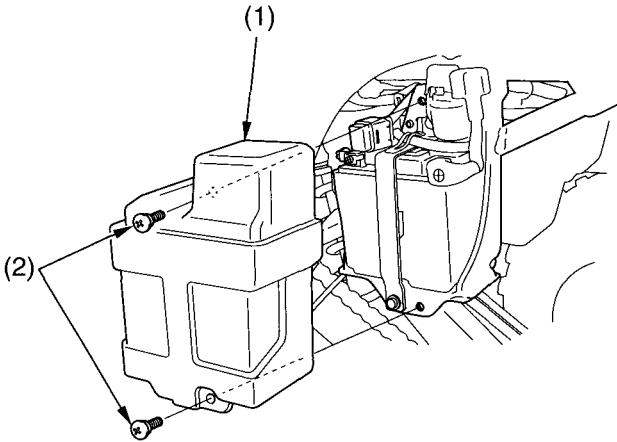

(1) battery cover

(2) screws

## Removal

1. Make sure the ignition switch is OFF (  $\bigcirc$  ).
2. Remove the battery cover (1) by removing the screws (2).

(cont'd)