



If the High Coolant Temperature Indicator Lights

- If the reserve tank is low or empty, don't ride without adding coolant (page 105). After adding coolant, turn the engine on and check the high coolant temperature indicator.
If the indicator doesn't turn off, do not ride. The engine needs repair. Transport your ATV to a Honda dealer (page 172).
If the temperature drops to normal, check the coolant level. If it has gone down, add more coolant.
- Check for an oil leak.
- Check the oil level. If necessary, add the recommended oil (page 95) to the upper level mark. If you must leave your ATV to get oil, secure it as much as possible.
- Start the engine, and check that the high coolant temperature indicator goes off.

If the indicator goes off — resume riding. If there is a leak — do not ride the ATV until the leak is repaired by a Honda dealer.

If there's a mild coolant leak, you can ride for awhile, carefully watching the indicator. Be prepared to stop and add more coolant or water. If the leak is bad, transport your ATV to a Honda dealer (page 172).

