

# Shifting Gears


---

Two gearshift switches are located next to the left handlebar grip: upshift ( ⬆ ) and downshift ( ⬇ ).


To upshift the transmission, press the upshift switch ( 4 ) once.

To downshift the transmission, press the downshift switch ( 5 ) once.

## UP SHIFTING SEQUENCE

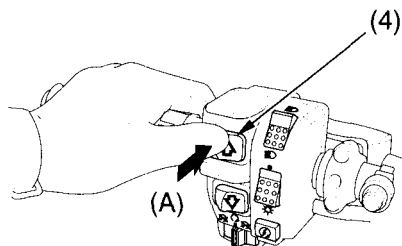

## DOWN SHIFTING SEQUENCE

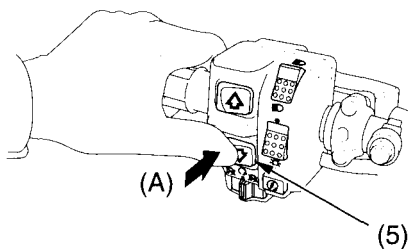

(4) upshift switch  
(5) downshift switch

(A) press