

# Engine Idle Speed and Air-Fuel Mixture

---

The best way to assure proper carburetion is to see your Honda dealer for regularly scheduled servicing, including carburetor adjustment.

Remember, idle speed adjustment is not a “cure-all” for other problems in your engine’s fuel-delivery system. Adjusting the idle will not compensate for a fault elsewhere.


The engine must be at normal operating temperature for accurate idle speed adjustment.

For information about high altitude carburetor adjustment, see page 219.

## Idle Speed Adjustment

Refer to *Safety Precautions* on page 101.

RIGHT SIDE

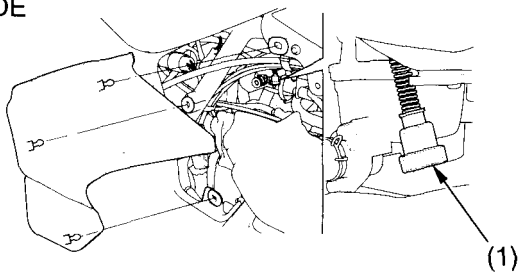

(1) throttle stop screw

1. If the engine is cold, start it and warm it up with ten minutes of stop-and-go riding. Stop the engine.
2. Park your ATV on a firm, level surface.
3. Connect a tachometer to the engine.
4. Shift into neutral. Start the engine.
5. Adjust idle speed by turning the throttle stop screw ( 1 ).

Idle speed (in neutral):

$1,400 \pm 100 \text{ min}^{-1} (\text{rpm})$