

Indicators & Displays

9	Minute select button	Advances the minutes displayed by the digital clock (page 26).
	WP button (TRX 500 FGA)	This button is used to input a waypoint or to erase waypoint data.
10	Adjust button	Used to set the digital clock (page 26).
	Plus button (TRX 500 FGA)	Advances the hour displayed by the digital clock (page 27). Advances the latitude and longitude when in the GPS mode.
11	Minus button (TRX 500 FGA)	Advances the minutes displayed by the digital clock (page 27). Advances the latitude and longitude when in the GPS mode.