

# Index

## T

|                                |         |
|--------------------------------|---------|
| throttle                       |         |
| cable .....                    | 169     |
| lever.....                     | 39, 169 |
| tires,                         |         |
| air pressure .....             | 194     |
| flat .....                     | 231     |
| replacing.....                 | 199     |
| repairing .....                | 198     |
| thread conditions .....        | 196     |
| tool kit .....                 | 140     |
| trailer hitch .....            | 43      |
| trailer towing                 |         |
| operational guidelines .....   | 86      |
| weight limits.....             | 85      |
| training, rider.....           | 78      |
| transporting your ATV .....    | 216     |
| tripmeter .....                | 23      |
| trouble, unexpected .....      | 223     |
| troubleshooting, starting..... | 226     |
| turning,                       |         |
| on level ground.....           | 113     |
| on hills or slopes.....        | 121     |

## V

|                       |     |
|-----------------------|-----|
| valve, fuel.....      | 30  |
| valve clearance ..... | 176 |