

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		↔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
	DRIVESHAFT BOOTS						160
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R:EVERY 2 YEARS)		119, 121
*	BRAKE FLUID	NOTE 3					141
*	BRAKE SHOE WEAR	NOTE 1					149
*	BRAKE PAD WEAR	NOTE 1, 2					144
*	BRAKE LIGHT SWITCH						150
	BRAKE SYSTEM						141
*	REVERSE LOCK SYSTEM						133
	SKID PLATES, ENGINE GUARD						159
*	CLUTCH SYSTEM						132
*	SUSPENSION						—
*	SPARK ARRESTER				C	C	139
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						152
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 220).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.