



Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			Refer to page	
			REGULAR MAINT. INTERVAL				
			mi	600	1200		
			km	1000	2000		
MONTH	1	6	12				
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS						161
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R:EVERY 2 YEARS)		119, 121
*	BRAKE FLUID	NOTE 3					141
*	BRAKE SHOES WEAR	NOTE 1					150
*	BRAKE PADS WEAR	NOTE 1,2					144
*	BRAKELIGHT SWITCH						151
	BRAKE SYSTEM						141
*	REVERSE LOCK SYSTEM						133
	GUARDS						160
*	CLUTCH SYSTEM						132
*	SUSPENSION						—
*	SPARK ARRESTER				C	C	139
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						153
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 218).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.