Parking


- 1. Look for level parking area. Make sure the ground surface is firm.
- 2. After bringing your ATV to a stop, hold the brakes while you shift into neutral.
- 3. Set the parking brake.
- 4. Turn the ignition switch OFF (\bigcirc).
- 5. If you're finished riding for the day, turn the fuel valve OFF.

If it is necessary to start the engine when your ATV in gear and is stopped on a grade, rock the vehicle back and forth to allow shifting the transmission into neutral.

Parking on a Steep Incline or a Loose or Slippery Surface

If you must park your ATV on a steep incline or loose or slippery surface, use the following procedure:

- 1. While holding the brakes, set the parking brake.
- 2. Turn the ignition switch OFF (\bigcirc) and release the brakes.
- 3. If the ATV begins to move, either while sitting on it or after you dismount, find a better parking location.
- 4. If rocks or other objects are available, you can block the wheels as shown for additional security.

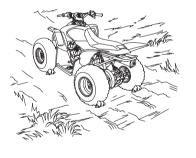



78 Basic Operation & Riding

