
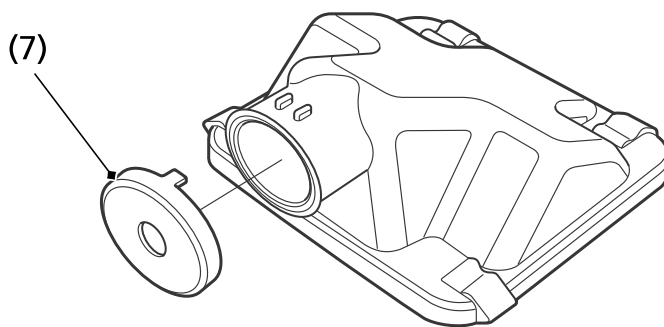


Safe Riding Precautions

Air Intake Restrictor Removal

1. Remove the seat (page 105).
 2. Unlatch the four retainer clips (5).
 3. Remove the air cleaner housing cover (6).
 4. Remove the air intake restrictor (7).
- Reinstall in the reverse order of removal.

UNDER SEAT

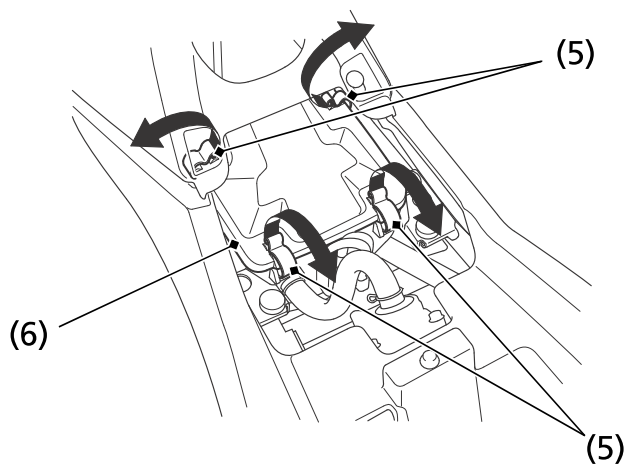

(5) retainer clips

(7) air intake restrictor

(6) air cleaner housing cover

56 Basic Operation & Riding