


# Wheels & Tyres

Also, if you hit a pothole or other hard object while riding, stop as soon as you safely can and carefully inspect the tyres for damage.

## Tread Wear

You must periodically confirm the tread wear depth.

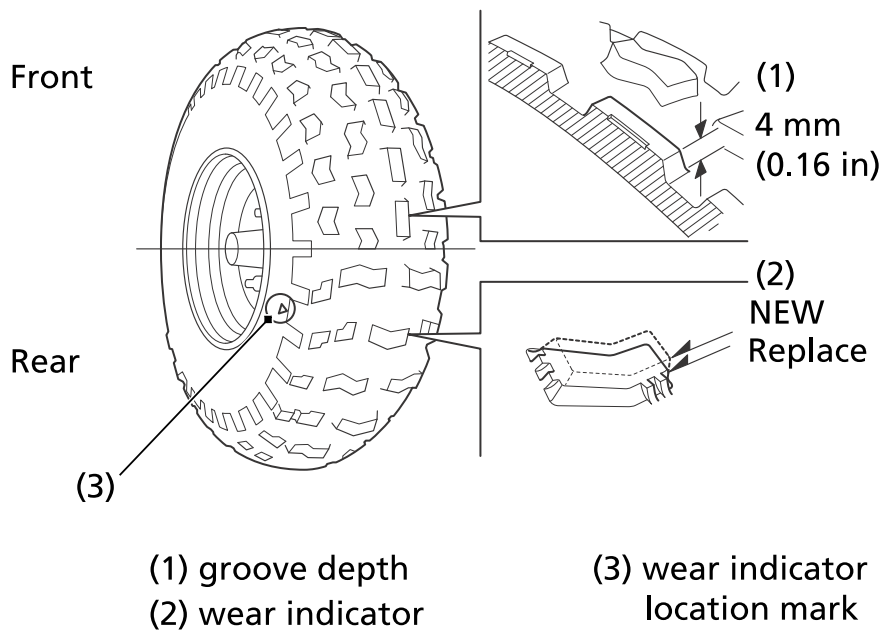

To check the condition of a tyre tread, measure the groove depth (1) in the centre of the tyre, or check the wear indicator (2).

For best performance, you should replace a tyre before the tread depth at the centre reaches the following limits:

front	4 mm (0.16 in)
rear	4 mm (0.16 in)

If the wear indicators are visible, replace the tyre immediately as it is no longer safe.

## 140 Servicing Your Honda