


6. Remove the right engine heat guard and right under cowl. ➔ P. 65
7. Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.

► Discard the oil and oil filter at an approved recycling centre.

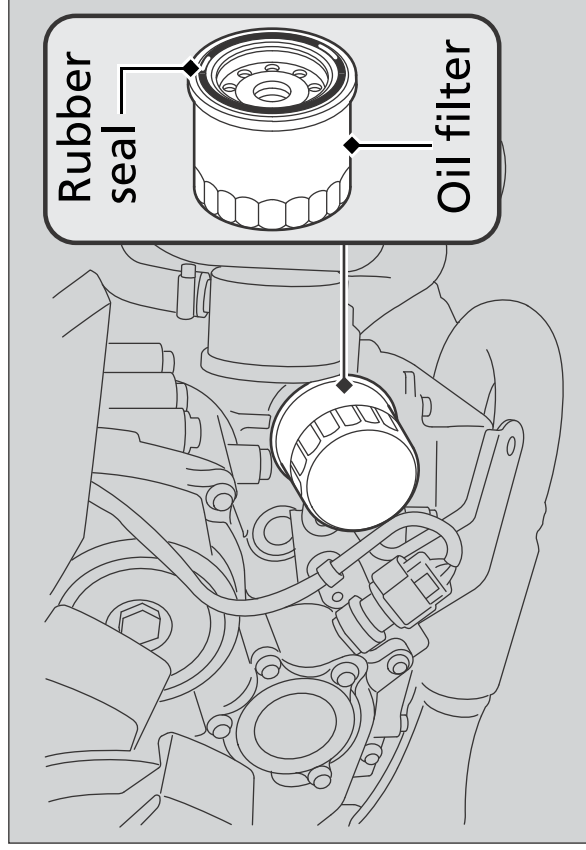

8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.

9. Install a new oil filter and tighten.

Torque: 26 N·m (2.7 kgf·m, 19 lbf·ft).

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 29 N·m (3.0 kgf·m, 21 lbf·ft).