

REAR SEAT COVER


See your authorized Honda dealer for removal/installation of the rear seat cover.

Installation:

1. Remove the seat (see page 39).
2. Remove the right and left rear grab rails (1) by removing the mounting bolts (2). Slide the right and left grab rails to the center as shown in the drawing (I), then fold.
3. Install the seat securely, then install the rear seat cover (3) as shown in the drawing (II). Set the right and left mounting bolts and tighten them securely.

▲ WARNING

- * **The grab rails must be returned to the upright position when riding in tandem.**

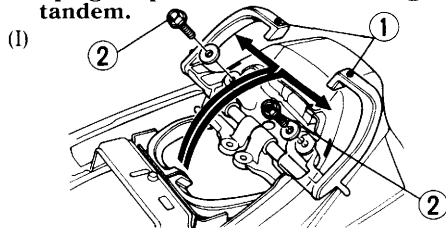

(1) Rear grab rails
40 (2) Mount bolts


Removal:

1. Removal can be done in the reverse order of installation.
- * Tighten the rear grab rail mounting bolts (2) securely.
TORQUE: 35 N·m (3.5 kg-m, 25.3 lb-ft)

▲ WARNING

- * **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. The grab rail could come off easily and result in serious injury if the assembly is not made properly.**
2. Install the seat properly (see page 39).

(II)

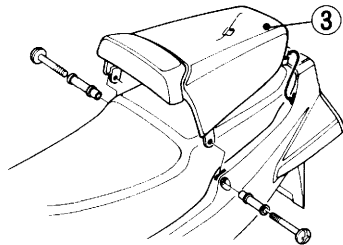

(3) Rear seat cover