


### Main fuse A:

The main fuse A (1) is located under the seat.

The specified fuse is:

**30A**

1. Remove the seat (page 48).
2. Disconnect the wire connector (2) of the starter magnetic switch.
3. Pull out the old fuse and install a new fuse. The spare fuse (3) is located side of the starter magnetic switch .
4. Reconnect the connector and install the seat.

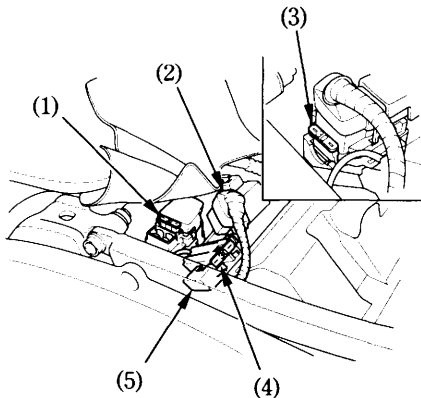

### Main fuse B:

The main fuse B (4) is located under the seat.

The specified fuse is:

**30A**

1. Remove the seat (page 48).
2. Open the fuse box cover (5).
3. Pull out the old fuse and install a new fuse. The spare fuse (3) is located side of the starter magnetic switch .
4. Close the fuse box cover and install the seat.

(1) Main fuse A

(2) Wire connector

(3) Spare main fuse

(4) Main fuse B

(5) Fuse box cover