

IDLE SPEED

(Refer to the maintenance precautions on page 72).


The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

1. Warm up the engine, shift to neutral.
2. Adjust idle speed with the throttle stop screw (1).

Idle speed (In neutral):

1,200 ± 100 min⁻¹ (rpm)...E,F,G,ED
ND,U

1,200 ± 50 min⁻¹ (rpm) ...SW

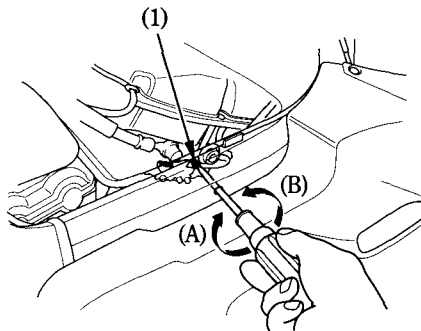

(1) Throttle stop screw

(A) Increase

(B) Decrease