

Main fuse A:

The main fuse A (1) is located under the seat.

The specified fuse is:

30A

1. Remove the seat (page 44).
2. Disconnect the wire connector (2) of the starter magnetic switch.
3. Pull out the old fuse and install a new fuse.
The spare fuse (3) is located side of the starter magnetic switch .
4. Reconnect the connector and install the seat.


Main fuse B:

The main fuse B (4) is located under the seat.

The specified fuse is:

30A

1. Remove the seat (page 44).
2. Open the fuse box cover (5).
3. Pull out the old fuse and install a new fuse.
The spare fuse (3) is located side of the starter magnetic switch .
4. Close the fuse box cover and instol the seat.

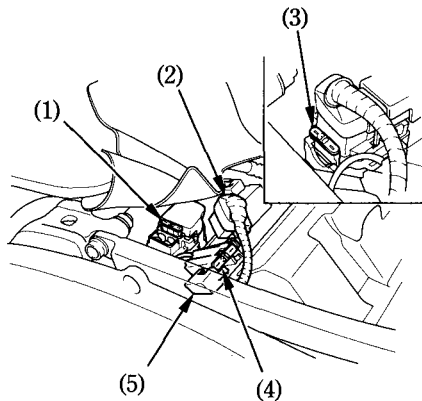

- (1) Main fuse A
(2) Wire connector
(3) Spare main fuse

- (4) Main fuse B
(5) Fuse box cover