


AIR CLEANER

(Refer to the maintenance precautions on page 47).

The air cleaner should be serviced at regular intervals (page 43). Service more frequently when riding in unusually wet or dusty areas.


1. Remove the bolt (1) and the air cleaner cover (2).
2. Remove the air cleaner stay (3) by removing the screws (4).

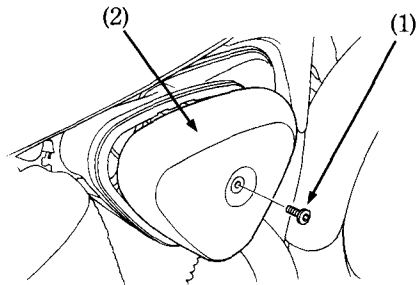

(1) Bolt

(2) Air cleaner cover

3. Take out the air cleaner element (5) and discard it.
4. Install the new air cleaner element.
Use the Honda genuine air filter or an equivalent filter specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause premature engine wear or performance problems.
5. Install the removed parts in the reverse order of removal.

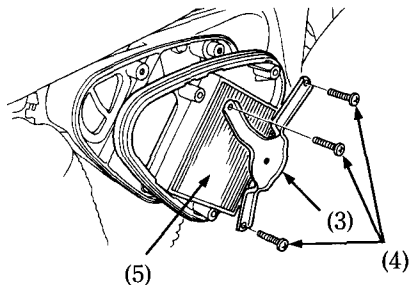

(3) Stay

(4) Screws

(5) Air cleaner element