


Fuse box:

The fuse box (1) is located behind the right side cover. The specified fuse are:

10A,15A

1. Remove the right side cover (page 34).
2. Remove the fuse box cover (2) by removing the screw (3).

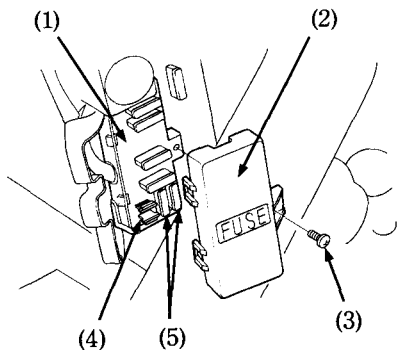

- | | |
|--------------------|------------------|
| (1) Fuse box | (4) Fuse remover |
| (2) Fuse box cover | (5) Spare fuses |
| (3) Screw | |

3. Pull out the fuse with the fuse remover (4). If the fuse is blown, install a new fuse.

The spare fuses (5) are located in the fuse box.

4. Install the fuse box cover and right side cover.

