



### Fuse Box:

The fuse box (1) is located near the battery.


The specified fuses are:

Main fuse 1 10A

Main fuse 2 30A

Sub fuse 10A, 15A

1. Remove the battery cover (page 112 ).
2. Open the fuse box cover (2).
3. Pull out the old fuse and install a new fuse.  
The spare fuses (3) are located in the fuse box.
4. Close the fuse box cover and install the battery cover.

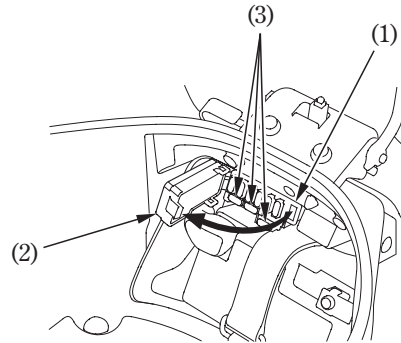

- (1) Fuse box
- (2) Fuse box cover
- (3) Spare fuses

