

FEATURES


(Not required for operation)

STEERING LOCK

The steering lock (1) is on the steering stem.

To Lock:

Turn the handlebar all the way to the left and insert the key into the lock, turn the key 180° clockwise and remove it.

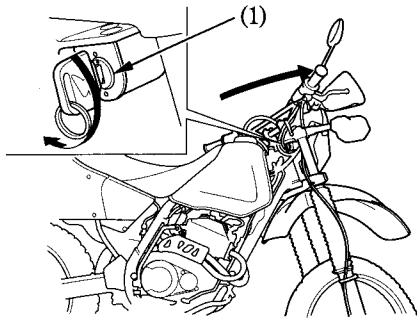

(1) Steering lock